


(POWER FEED. CAT # LP3941R SHOWN). ALSO SURFACE TRACK AND LIVE END (RIGHT SIDE) SHOWN NEUTRAL WIRE (WHITE) AVAILABLE FOR LEFT SIDE (CAT #LP3942R) FOR CLARITY. OTHER LP3 ACCESSORIES NOT SHOWN 3 CIRCUIT TRACK (3 CCT) FIG. 2 LEVER AT THE CELLING ADAPTER SIDE GUIDE KNOB "OFF" AT THIS EXTENSION INTO I OCATION Guide Lug (FIG. 1). TRACI TRACK HEAD CONNECTOR TRACK HEAD OFF" POSITION CONNECTOR

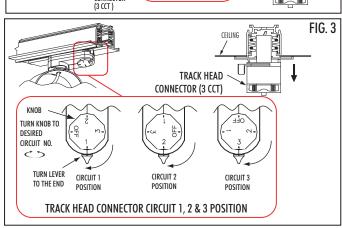

Track Fixture Installation (120V - 277V AC):

WARNING: Always disconnect power before fixture installation, wiring or maintenance! NOTE: Check fixture and track voltage to make sure fixture voltage is within the range of track volage before connecting fixture to track. 1. Remove the Live End (Power Feed, right or left) cover and plate and screw to expose wires (FIG. 1).

Xembre file Live cha (rower reed, ngin or len) cover and plate and screw to expose wres (rio.
With the power off, connect the Cable to the Relative Terminal (See Wiring Diagram above).

loading of the neutral conductor.

3. Insert the Live End (Power Feed, right side shown FIG. 1) into the 3 Circuit Track (3 CCT TRACK) using the Guide Lue (FIG. 1).

4. Fasten the Lock Screw till it fully locks with the Track (FIG. 1).

5. Use slots (3/16" x 11/32") in Track (or make holes in Track) to secure Track to ceiling with hardware and/or safety cable(s) (by others) as needed. Use Track as template/guide to mark hole locations on ceiling or wall. 6. Install, and secure, the 3 Circuit Track (3 CCT TRACK) to ceiling or wall using hardware (by other) and/or safety cable (by other) (FIG. 1). Do not allow hardware or cables in Track that may interfere with Track head(s) or any Track live parts (FIG. 4, Page 2 of 2). Replace plate and screw on Live End to cover hole in ceiling (FIG. 1).


7. On the fixtures 3 circuit (3 CCT) Tack Head Connector make sure the Lever is on the side and the Knob is in the "OFF" position" (FIG. #2). Do NOT install the fixture track head into the track if the Track Head Connector is NOT in this position.

8. Align the fixture Track Head to the 3 CCT Track so that the Adapter Guide is opposite side of the Track Extension (FIG. 2).

Install the fixtures Track Head Connector into the Track (FIG. 2) at the desired location and turn the Lever on the Track head to the end of the Track Head (FIG. 3).

10. Turn the Track Head Knob to the desired circuit position (FIG. 3).

11. To remove the fixture Track Head Connector from the Track disconnect power (see above WARNING), and reverse steps 9 and 10 above by turning the Knob to the "OFF" position and then push Lever to the side of the Track Head Connector (FIG. 2).

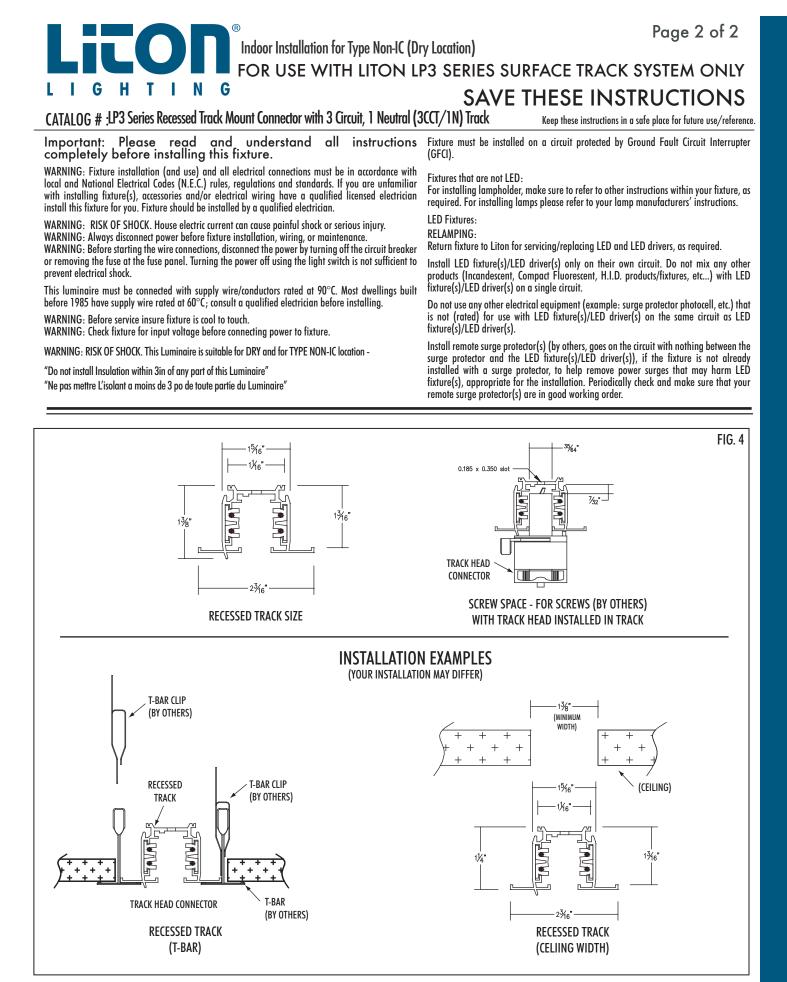

04162019

Liton