

MONOPOINT

MOUNTS PERMANENTLY TO OUTLET BOX. ALLOWS ANY LAMPHOLDER TO 300W MAXIMUM TO BE CONVERTED TO CANOPY INSTALLATION.


1. Locate junction box in ceiling or on wall containing two wires, a black (Hot +) and a white (Neutral -), MAKE SURE TO SPlice WHITE TO WHITE, AND BLACK TO BLACK.
Note: Connect the green ground wire to the green ground screw or the green wire in the junction box.
2. After wires are connected, push wires into junction box and attach mounting bracket to junction box with two screws (A).
3. Place monopoint cover over mounting bracket and attach with two screws (B).

TO INSTALL:

1. Hold lampholder by the mounting adapter and pull down on mounting adapter sleeve. Insert contact head into monopoint opening. Twist mounting adapter approximately 90° until mounting sleeve tab locks into monopoint opening.
2. NOTE: FORCING MOUNTING ADAPTER IN WRONG DIRECTION MAY DAMAGE THE CONTACT ASSEMBLY! IF MOUNTING ADAPTER WILL NOT TURN EASILY, TWIST ADAPTER IN OPPOSITE DIRECTION. POLARITY TAB ON ADAPTER MUST ALIGN WITH POLARITY LINE ON MONOPOINT FOR PROPER INSTALLATION.

TO REMOVE:

1. Pull down on mounting adapter sleeve until tab is free of monopoint opening. Twist mounting adapter 90° until contact head is free and remove lampholder from monopoint.

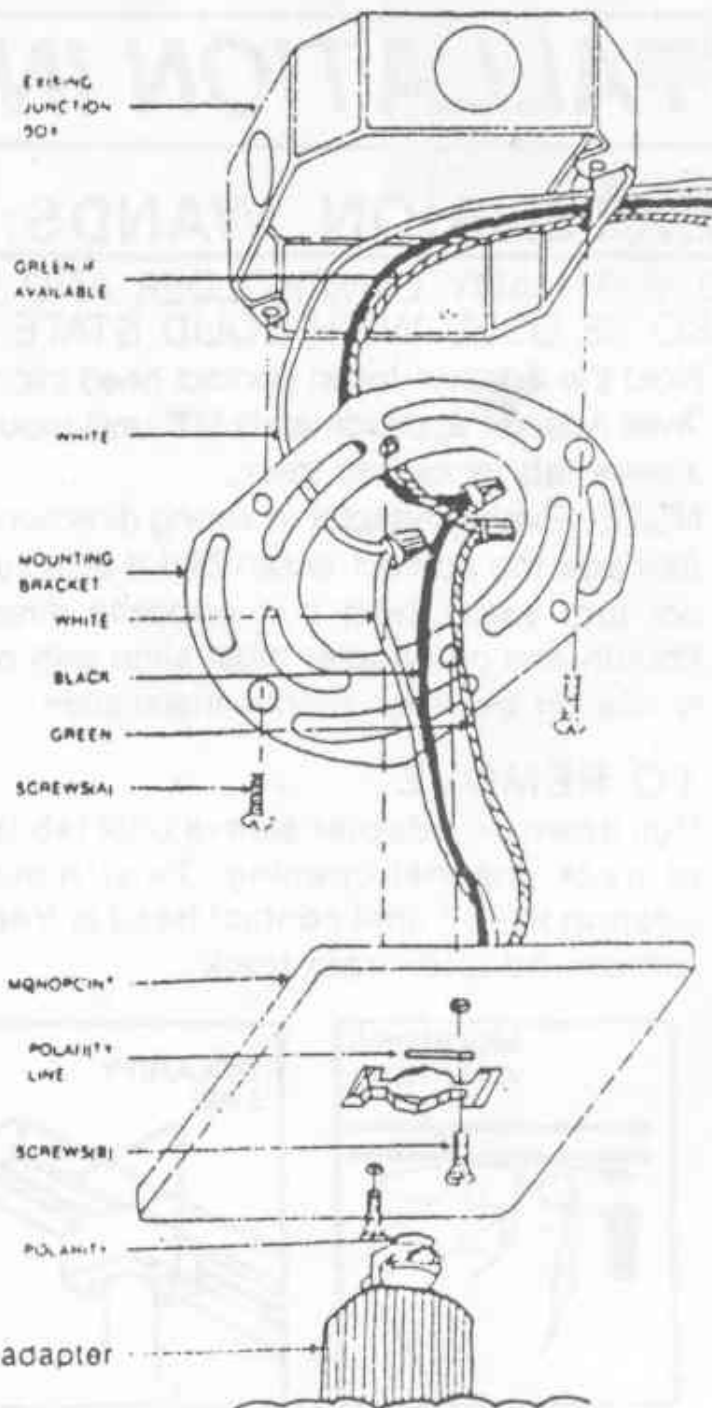

SAVE THESE INSTRUCTIONS