
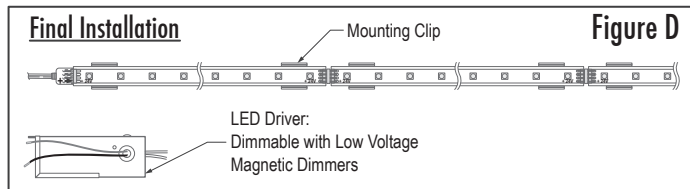
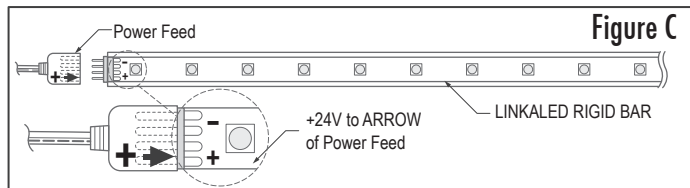
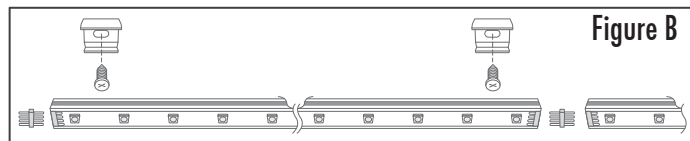


INSTALLATION INSTRUCTIONS for LINKALED RIGID BAR UNDER CABINET

CATALOG # : LULEDB-Series

SAVE THESE INSTRUCTIONS

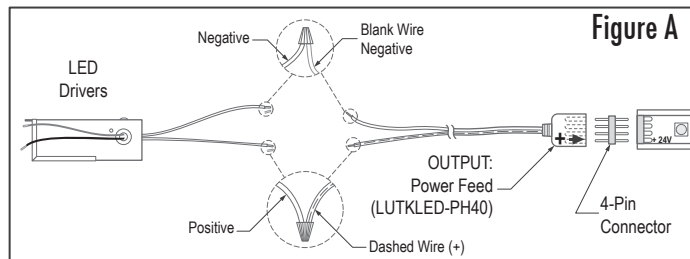

INSTALL AND USE THIS LUMINAIRE FOLLOWING THE NATIONAL ELECTRICAL CODE, YOUR LOCAL ELECTRICAL CODE AND REGULATIONS.

PREPARATION:

1). Read and understand instructions completely before installing this luminaire. If you are unfamiliar with electrical wiring have a qualified licensed electrician install this luminaire.

CAUTION! Use proper input voltage for AC LED Driver.

WIRING LED DRIVER:

Step 1) Wiring LED Driver to Power Feed: Connect the Positive wire from LED Driver to the **Dashed Positive Wire** from the Power Feed, then connect the Negative wire from LED Driver to the Blank Negative wire from the Power Feed, see FIG. A.

Step 2) Layout LED Rigid Bar: Connect LED Bar sections together using the 4-Pin connectors (provided). For mounting to any surface use the clips and screws (provided), see FIG. B.

NOTES: — DO NOT Paint in the Field.

- — (+24V) mark must line up on all sections
- — Maximum recommended run is 20 feet (~100W) per Power Run

Step 3) Connect Power Feed to LED Rigid Bar Layout: Make sure arrow of the Power Feed matches the +24V mark on end of LED Bar, see FIG. C.

For proper final installation of all Rigid Bar Layouts, see FIG. D.