


EEMA® LIGHTING GROUP LOS ANGELES, CA

INSTALLATION INSTRUCTIONS for LINKALED TAPE UNDER CABINET CATALOG # : LUTKLED24V Series

SAVE THESE INSTRUCTIONS

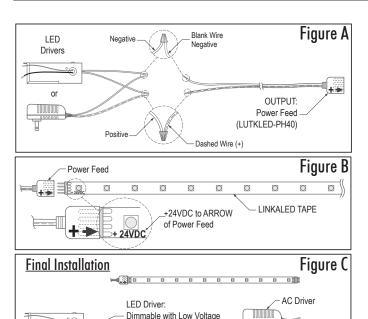

Magnetic Dimmers

INSTALL AND USE THIS LUMINAIRE FOLLOWING THE NATIONAL ELECTRICAL CODE, YOUR LOCAL ELECTRICAL CODE AND REGULATIONS. PREPARATION:

1). Read and understand instructions completely before installing this luminaire. If you are unfamiliar with electrical wiring have a qualified licensed electrician install this luminaire.

CAUTION! Use proper input voltage for AC LED Driver.

WIRING LED DRIVER:

Step 1) Wiring LED Driver to Power Feed: Connect the Positive wire from LED Driver to the Dashed Positive Wire from the Power Feed, then connect the Negative wire from LED Driver to the Blank Negative wire from the Power Feed, see FIG. A.

Step 2) Layout LinkaLED: Connect LinkaLED sections together using on board male/female connectors, see FIG. C. For mounting to any surface use adhesive on back.

NOTES: 24VDC mark must line up on all sections

- __Maximum recommended run is 25 feet (~60W) per Power Feed
- _ LinkaLED Tape is cuttable every 4"

Step 3) Connect Power Feed to LinkaLED Layout: Make sure arrow of the Power Feed matches the +24VDC mark on end of LinkaLED Tape, see FIG. B.

