

INSTALLING LRXQ3 TRIMS WITH LHQLD3 HOUSINGS

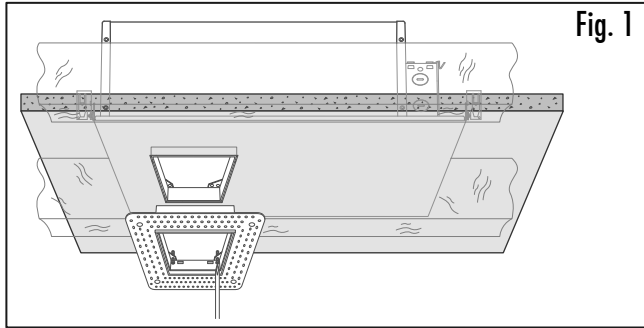


Fig. 1

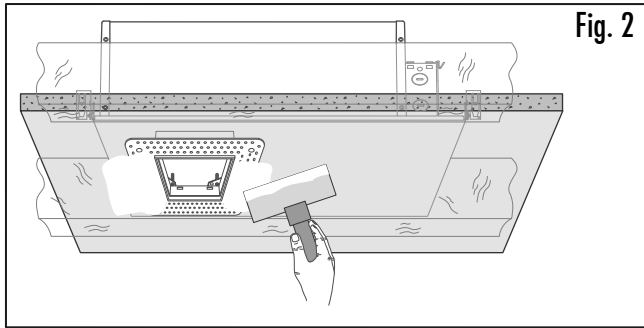


Fig. 2

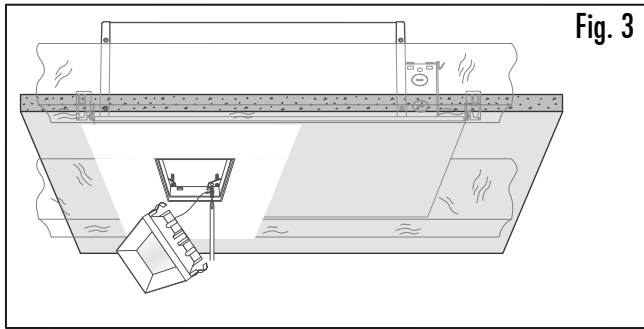


Fig. 3

Note: Plaster Flange Installed Below Drywall.

Trim Installation (Trimless Version Only):

1. Separate the Mud Flange from the Trim from the Box.
2. Holding the flange in the trim bracket, drive the retaining screws (Fig. 1) into the corresponding holes in the square collar assembly. The flange should be flush to the ceiling. (If desired, flange can be fastened to drywall using drywall screws.)
3. Apply mudding material to the flange (up to the inside edge) and smooth it outward to create a trimless appearance. (Fig. 2)
Important: Allow to dry completely.
4. If necessary, fill in any cracks that may have developed.
Allow to dry.
5. Sand and paint the ceiling or otherwise finish the ceiling surface.
6. Fasten the Earthquake trim retention cable to the remaining hole on the inside of the square collar assembly. (Fig. 3)
7. Press the trim into the flange being sure to align the spring clips on the trim with the slots in the flange.