



INSTALLATION INSTRUCTIONS SHEET

Undercabinet Lighting

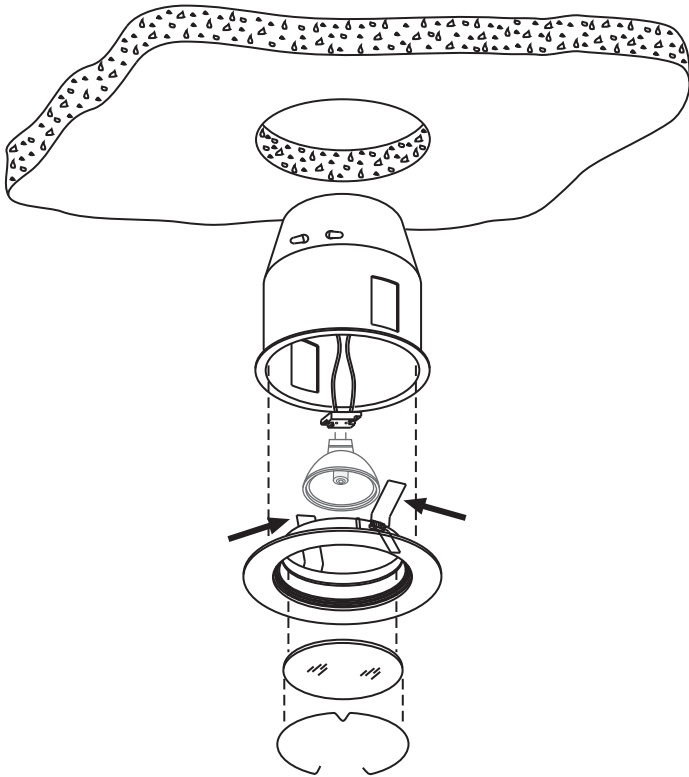

WARNING - Before starting the installation, disconnect the power by turning off the circuit breaker or removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

1. Make hole on the ceiling, see the illustration for your reference.
2. Make wire connections: Connect grounding wire (green or bare copper) from the supply circuit to the green or bare copper wire from the Housing. Connect the white wire from the Transformer to the white wire of the supply circuit. Connect the black wire from the Transformer to the black wire of the supply circuit. Use U.L. Listed wire connectors (by others). Secure wire connectors with U.L. Listed electrical tape (by others).
3. Install the Recessed Housing into the ceiling as shown in illustration.
4. Install the light bulb and replace the Trim with the lens as shown in illustration.

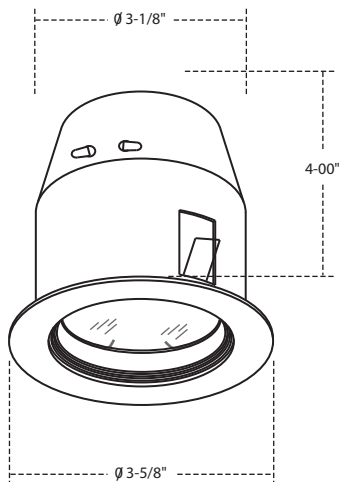

HOUSING DIMENSIONS

INSTALLATION POSITION

