


OPTION #1 USING LINKALED CONNECTORS

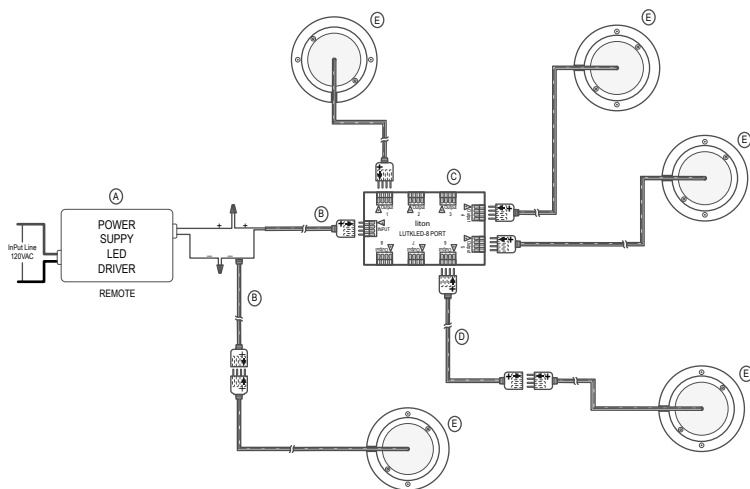

OPTION #2 HARDWIRE CONNECTION


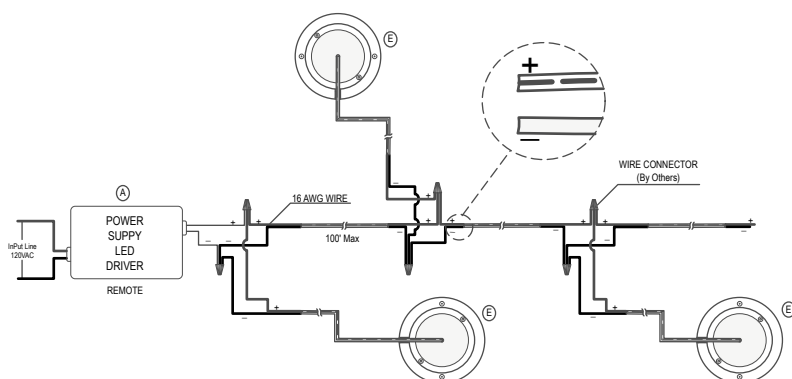


FIG. #1

FIG. #2




LK136LED - Recessed

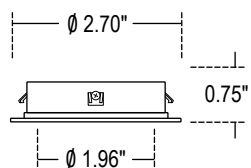

Ceiling Cutout: \varnothing 2.38" to 2.5"

LK136SLED - Surface

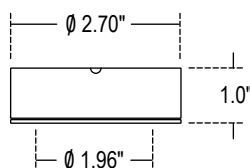

Mounting Holes:
2.25" Diameter

WARNING: DO NOT CONNECT PUCK TO DRIVER WITH POWER ON. DOING THIS MAY DAMAGE THE LED AND VOID THE WARRANTY.

INSTALL AND USE THIS LUMINAIRE FOLLOWING YOUR LOCAL ELECTRICAL CODES AND REGULATIONS.

PREPARATION:

1. Read and understand instructions completely before installing this luminaire. If you are unfamiliar with electrical wiring, have a qualified licensed electrician install this luminaire for you.

TO INSTALL LK136LED LINKALED RECESSED PUCK LIGHT:

1. Place remote driver in desired location. (DO NOT POWER)
2. Cut a hole of 2.38" to 2.5" in desired lamp location.
3. Following diagram, Option #1 or Option #2, connect puck to remote driver.
4. Push excess wire back into hole.
5. Push puck into hole (FIG. 1).
6. Connect power to driver.

TO INSTALL LK136LED LINKALED SURFACE MOUNT PUCK LIGHT:

1. Place remote driver in desired location. (DO NOT POWER)
2. Drill holes in desired location sufficient to allow pass-through of wire, 4-pin connector or wire nut connections and for mounting screws.
3. Remove puck light module from housing.
4. Mount housing in desired location using 2 screws (provided).
5. Following diagram, Option #1 or Option #2, connect puck to remote driver.
6. Pull lead through hole and housing.
7. Connect to puck.
8. Push lead and puck into housing (FIG. 2).
9. Connect power to driver.

LEGEND

- | | |
|-------------------------|--------------------|
| (A) DRIVER | |
| (B) LUTKLED-PH40 | END FEED CONNECTOR |
| (C) LUTKLED-PX8 | 8-PORT POWER HUB |
| (D) LUTKLED-PC16 | POWER EXTENDER |
| (E) LINKALED PUCK LIGHT | |