


READ AND UNDERSTAND ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING FIXTURE! SAVE THESE INSTRUCTIONS


- Danger: Always disconnect power before wiring, or maintenance. Fixture must be installed by a qualified electrician. Do not install in locations where water collects and/or stands for prolonged periods of time. Fixture must always be installed according to local and national electrical codes, rules & regulations. Fixture must be installed on a circuit protected by Ground Fault Circuit Interrupter (GFCI).
- Warning: The joint MUST be sealed between the mounting surface (e.g., wall, ground, ceiling, etc.) and the fixture with an appropriate sealing / caulking compound to provide a watertight seal. Seal all conduit opening(s) and opening(s) from water entry. Before service ensure fixture is cool to touch. Always ensure that all gaskets and sealing surfaces are free of dirt and debris.

LED fixture(s), LED driver(s) and LED electrical components are more precise electrically than standard non LED products (e.g. Incandescent, Compact Fluorescent, H.I.D., etc.). Please follow the following guidelines/requirements when installing LED fixture(s)/LED driver(s).

- 1. Install LED fixture(s) and/or LED driver(s) only on their own circuit. Do not mix any other non LED products/fixtures (e.g., Incandescent, Compact Fluorescent, H.I.D., etc.) with LED fixture(s)/LED driver(s) on a single circuit.
- 2. Do not use any other electrical equipment (e.g., surge protectors, photocells, etc.) that is not (rated) for use with LED fixture(s)/LED driver(s) on the same circuit as LED fixture(s)/LED driver(s).
- 3. Use GFCI's (by others) on each circuit (per installation instructions) appropriate for the installation.
- 4. Install remote surge protector(s) (by others, goes on the circuit with nothing between the surge protector and the LED fixture(s)/LED driver(s)), if the fixture in not already installed with a surge protector, to help remove power surges that may harm LED fixture(s), appropriate for the installation.

Periodically check and make sure that your remote surge protector(s) are in good working order.

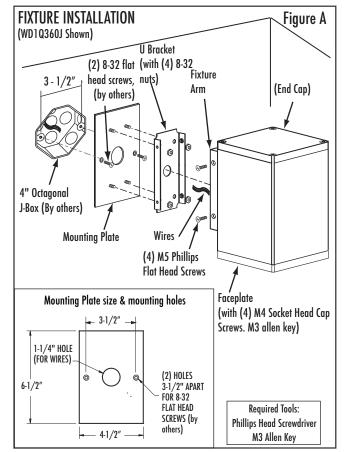

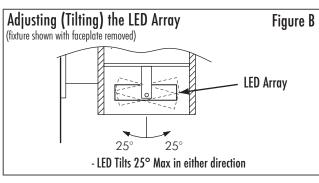

Fixture Installation:

- 1. Make sure supply wiring is in place before mounting fixture.
- 2. Mounting Plate installs directly to a 4" octagonal j-box. Make sure that mounting surface and/or j-box (etc.) can support fixture before installing fixture on mounting surface.
- 3. Remove U Bracket and Mounting Plate from Arm to expose mounting holes on Mounting Plate (see left, FIGURE A).
- 4. Use existing holes in Mounting Plate and mount Mounting Plate to a 4" octagonal i-box (by others) with 8-32 flat head screws (by others, FIGURE A) and tighten securely. If drilling new holes in Mounting Plate to mount Mounting Plate to a different j-box or directly to mounting surface make sure hardware (by others) on Mounting Plate do not interfere with the U Bracket and/or Arm mounting flat (or flush) to the Mounting Plate. Cover newly exposed metal on the Mounting Plate with an outdoor paint to protect it from the elements (appropriate for the application).
- 5. Secure U Bracket flat to Mounting Plate with supplied (4) 8-32 nuts and tighten securely. 6. Connect the supply wiring to the fixture. See "Wiring Fixture" instructions below.
- 7. Mount fixture arm securely on U Bracket with four (4) flat head M5 screws and tighten securely. 8. Seal all holes/openings from water entry to junction box, wires, and/or fixture (e.g., Mounting Plate to mounting surface and Mounting Plate to Arm).

Wiring Fixture:

WARNING: Check fixture for input voltage before connecting power to fixture.

- 1. Connect ground wire (green or bare copper/aluminum) from the supply circuit to the ground wire (green or bare copper) /screw/connector from the luminaire.
- 2. Connect the neutral (common) wire from the power supply to the neutral wire from
- 3. Connect the main voltage supply wire (line/lead) from the power supply to the line (lead) wire from the luminaire.
- 4. Secure connection using UL Listed wire nuts/connectors and then with UL Listed Electrical tape (by others), as required, appropriate for the connection.
- 5. For Dimming wiring see Liton web site.
- 6. If fixture is using an internal photocontrol/photocell device please see manufacturers photocontrol/photocell instruction for wiring supply circuit to the photocontrol/photocell in the fixture.

Adjusting (Tilting) the LED Array (FIGURE B):

- 1. Make sure supply wiring is in place before mounting fixture.
- 2. If the LED Array needs to be tilted in the fixture remove faceplate from fixture by unscrewing faceplate.
- 3. Tilt LED Array to desired angle twards or away from the wall, (25° Max.).
- 4. Replace faceplate by screwing back faceplate on fixture. Screw Faceplate on fixture completely to prevent water entry.

08122022

5461 W. Jefferson Blvd. Los Angeles, CA 90016 • P. 800-515-4880 • F. 800-972-4880 • www.liton.com

Product specifications subject to change without notice.

Liton




Sheet 3 of 3 JB and JB2 Hole Locations for WD1Q360J

READ AND UNDERSTAND ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING FIXTURE! SAVE THESE INSTRUCTIONS

JB & JB2 hole Dimension From wall (WD1360J Shown pointing down for clarity) 7/8" Hole (for 1/2" Trade onduit in arm - centered in arm side) (7¹⁵/₁₆") (JB or JB2)

 $(7\frac{5}{8}")$

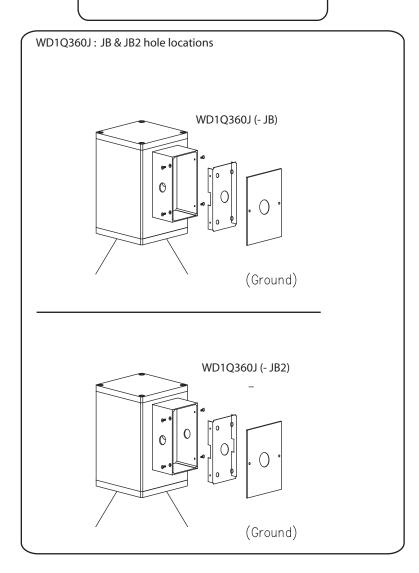

08122022